




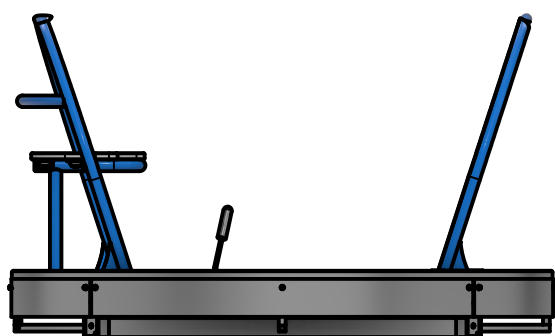

□ A guide to maintaining the IP8512 - Mini Whirl

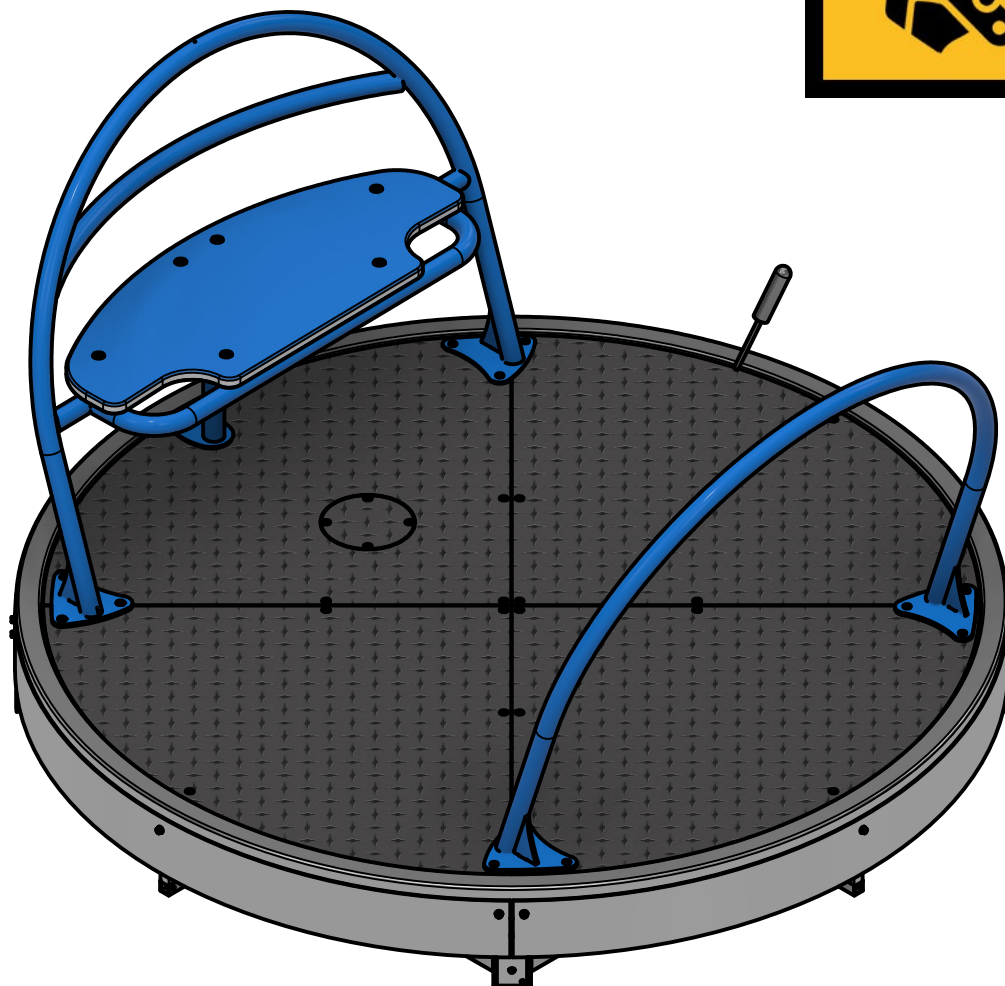

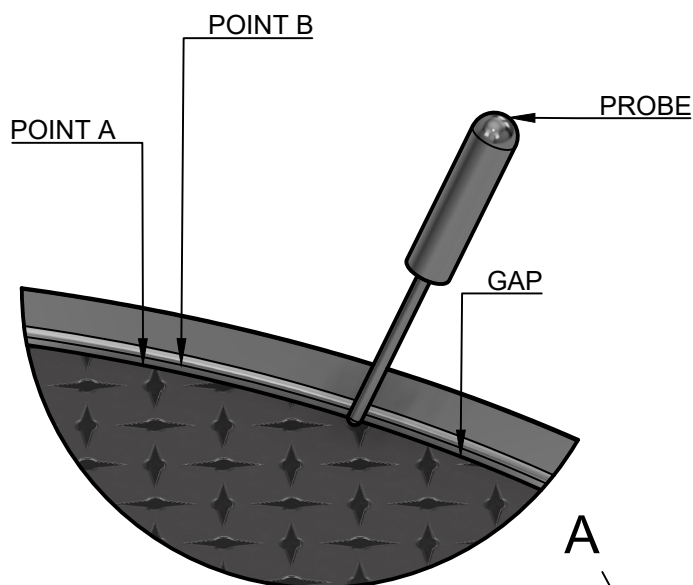


Upon inspection, it is vital the following checks are carried out:

- Ensure the rotation of the wheelspin runs smoothly.
- Check all fixings are secured tightly.
- Slowly rotate the unit and using the probe, ensure the gap between **Point A & Point B** does not exceed 8mm anywhere along the gap.



Adjustments:

Only if required, adjustments can be carried out by loosening off the fixings on the Tread Plates and adjusting the positioning of the Tread Plates where necessary. This will help reduce any gaps along the Outer Gap that exceed 8mm.

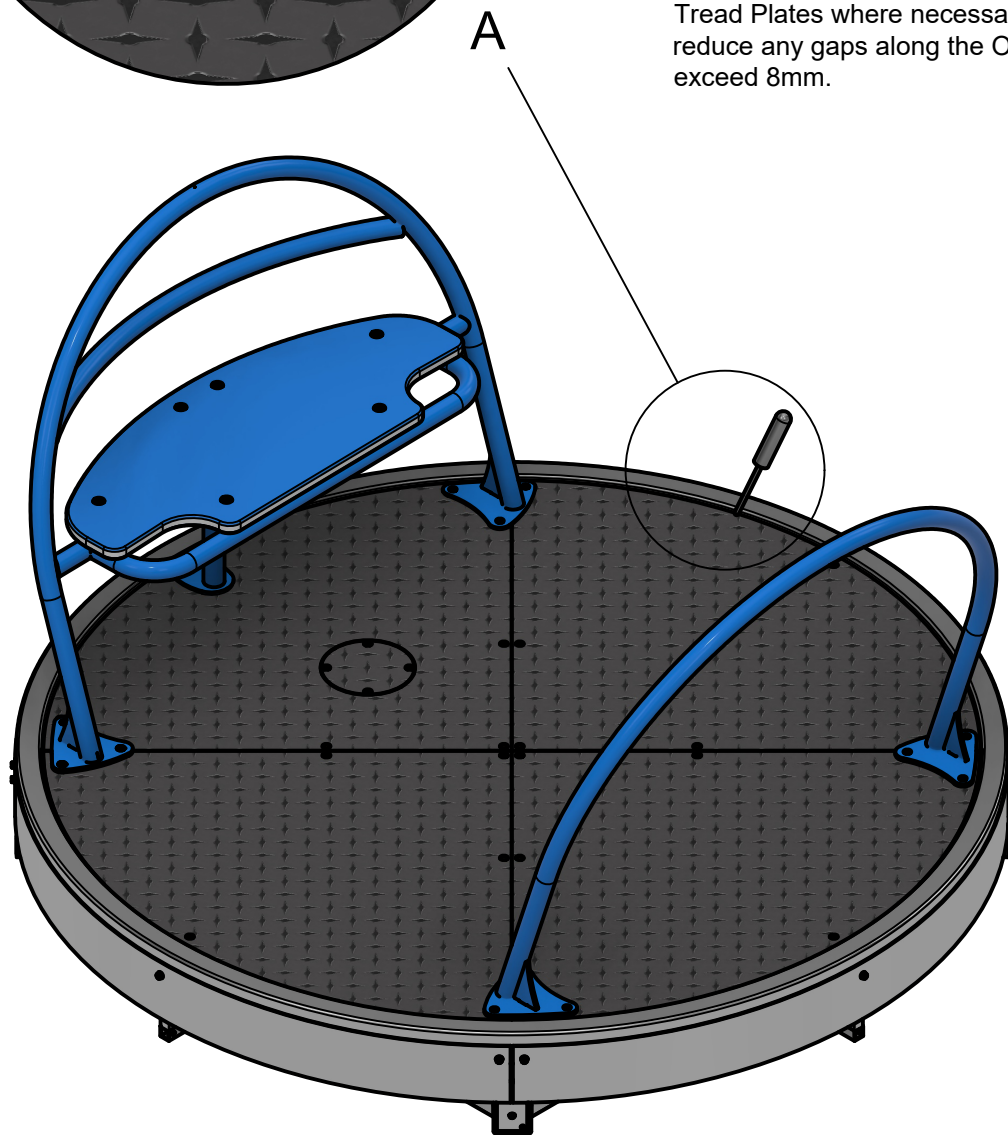



01

02

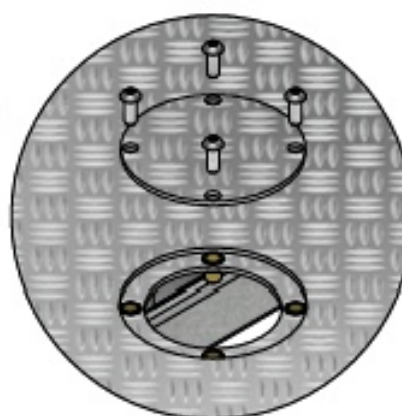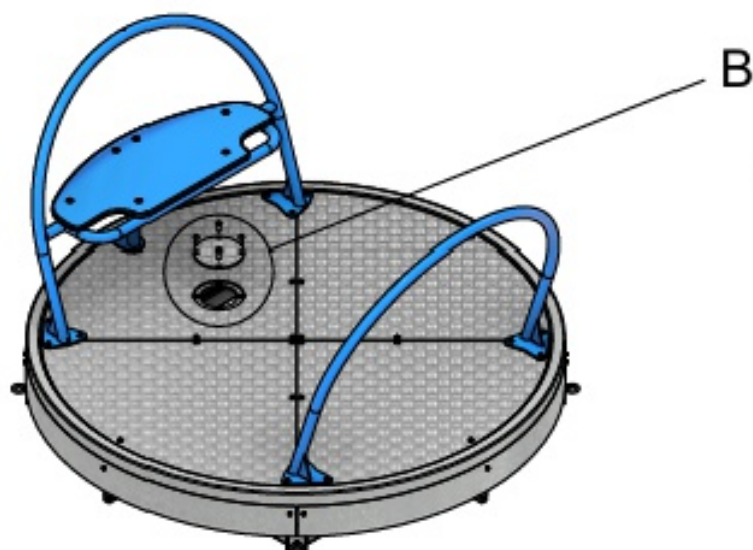



REMOVE (x4) 3/8-16"x1" TORX
BUTTON HEAD SCREWS

03

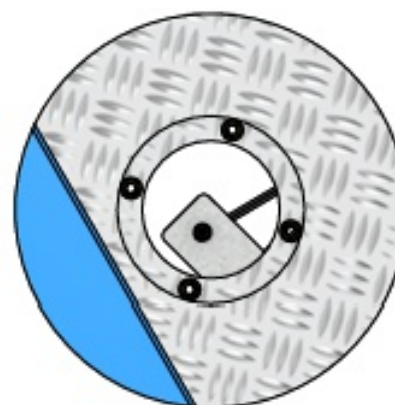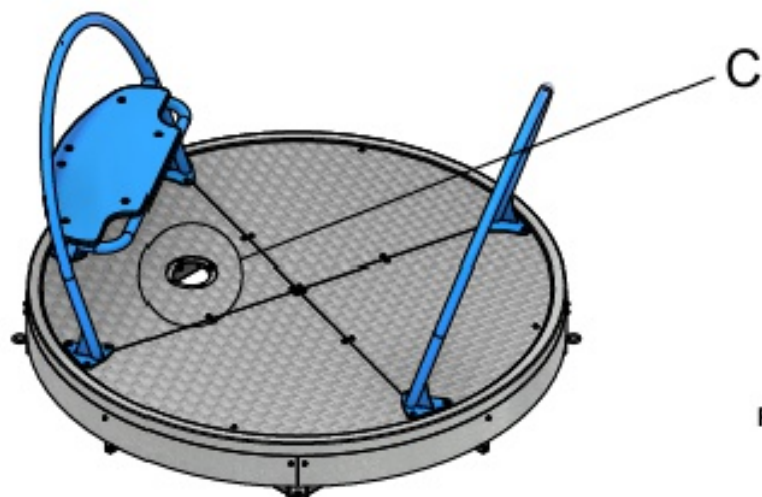

ROTATE UNIT UNTIL OPEN HATCH
LINES UP WITH GREASE NIPPLE

04

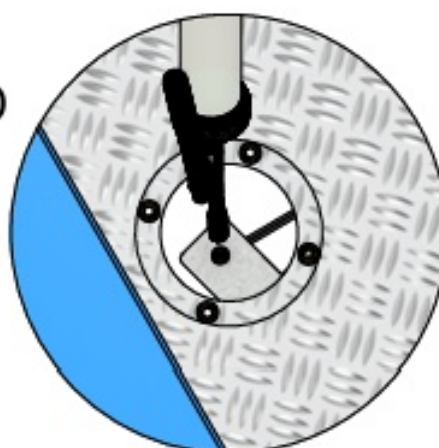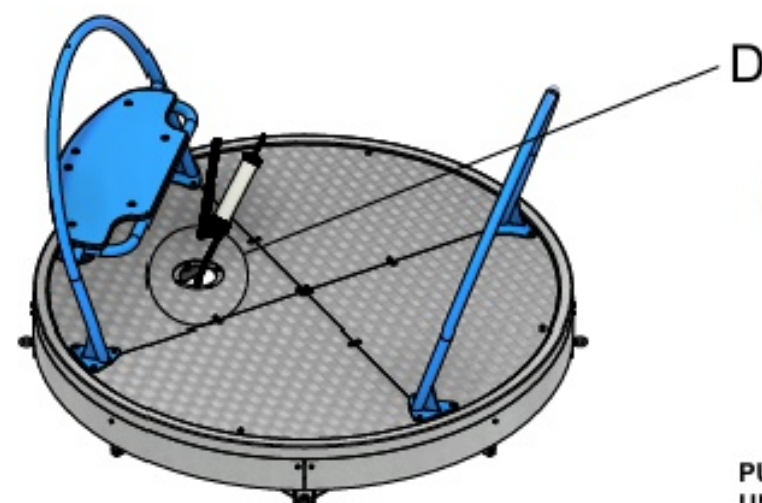

PUMP GREASE WHILE ROTATING THE
UNIT AT LEAST 4 TIMES AT A STEADY
PACE